



In 1980, TOMY came out with a further black slab which was even bigger! It was called Digital Daredevil. It featured mechanical game/lights just like Demon Driver.

If you liked your racing action, this was a fair choice. Digital Daredevil (or Eddie Kidd Stunt Bike) fell quickly into obscurity however. Not surprising since the arcade games of this period, and the home gaming machines were now really pushing the boundaries of the technology. The Atari and Phillips machines both receiving much better games. Still, Daredevil was fun, it had only two speeds and a jump button, it took a novel side view of the action and entertained for many hours. Endorsement by the legend Eddie Kidd wouldn't be the end of his gaming endorsements.

DIGITAL DAREDEVIL™

Front

INSTRUCTIONS

Back

Object:
Get your timing and speed just right and jump every obstacle that crosses your path.
Insert 2 "C" batteries as shown. We recommend long life or alkaline batteries.

How to play:
Set Digital Daredevil on a level surface, set the score at 0-0, choose either Pro 1 or Pro 2, and turn the timer dial in the direction of the arrow, setting it in the S (Start) Position. Use your left hand to control the Speed Lever and your right hand to control the Jump and Reset/Pass buttons. Turn the Power switch to ON, and you're ready to play.
Press the Jump button at exactly the right second, and try to jump over every obstacle that approaches your motorcycle. (The drum cans and car obstacles are wider, so in order to clear them, you must switch into high speed).
If your timing is off, and you crash into an obstacle, your bike will flip over and start flashing. Immediately press the Reset button and keep it pressed until your motorcycle has returned to its upright position. If you think your timing is off and you don't want to attempt jumping an obstacle, keep the Reset/Pass button depressed until you're ready to start jumping again. Time loss is less this way than if you crash into an obstacle.

Scoring
The drum cans and car obstacles are worth more points. A score of 75 points is considered a pro, 40-74 a semi-pro and under 39 a beginner.
Be sure to turn the Power switch to OFF when you're finished playing. When batteries begin to wear down your motorcycle will grow dim and no longer crash. Replace old batteries with 2 "C" batteries. We recommend long life or alkaline batteries.
Challenge your driving skills on the Digital Daredevil obstacle course. If you dare.

© 1980 Tomy Corp., 901 E. 233rd Street, Carson, CA 90745 • (213) 549-2721
www.handheldmuseum.com
Printed in Japan

